

INSTALLATION INSTRUCTIONS FOR ACI  
97 - 04 FENDER GRILLES  
AFK070

**IMPORTANT!**  
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBER LISTED. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

1. DRY FIT PARTS TO CAR TO DETERMINE CORRECT FIT. **NOTE... THIS STEP IS TAKEN TO DETERMINE FINAL INSTALLATION POSITION (SEE FIG.1).**
2. PREP PARTS FOR PAINT BY SANDING WITH THE APPROPRIATE SANDPAPER AS SUGGESTED BY PAINT MANUFACTURER. COMPLETE NECESSARY PAINT WORK.
3. CUT TWO-SIDED TAPE PROVIDED WITH FENDER GRILLES TO LENGTH AND APPLY TO SPEARS. **NOTE... APPLY TAPE IN RECESSED AREA OF SPEARS ONLY (SEE FIG.3).**

**!!!TIP!!!**

**USE OF A HEAT GUN OR HAIR DRYER TO HEAT THE MATING SURFACES OF THE PART AND TWO-SIDED TAPE WILL PROVIDE GREATER ADHESION.**


4. CLEAN INSTALLATION AREA ON CAR OF ANY DIRT AND/OR WAX. THOROUGHLY RINSE AND DRY AREA.
5. INSTALL PARTS IN FINAL POSITION. PRESS AREAS OF THE PART FITTED WITH TWO-SIDED TAPE FIRMLY AND EVENLY ONTO FENDER.

**!!!TIP!!!**

**USE OF A HEAT GUN OR HAIR DRYER TO HEAT THE MATING SURFACES OF THE PART AND TWO-SIDED TAPE WILL PROVIDE GREATER ADHESION.**



**FIG. 1**

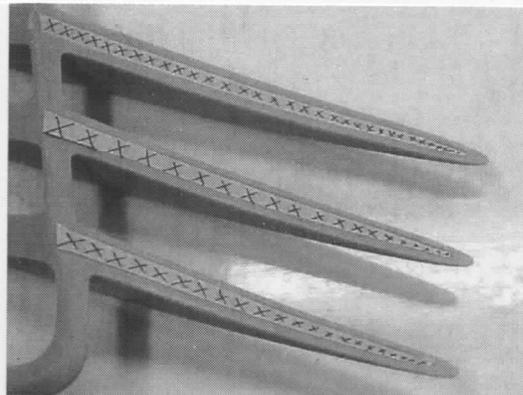

**FIG. 3**