



INSTALLATION INSTRUCTIONS FOR ACI
97 – 04 GROUND EFFECTS
AGK600, AGK600R

IMPORTANT!
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBER LISTED. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

1. JACK UP CAR AND PLACE ON JACK STANDS.
2. BEGINNING ON ONE SIDE, REMOVE 10mm HEX HEAD SCREW WHERE FENDER AND ROCKER JOIN AND RETAIN FOR LATER USE (SEE FIG. 2A). NEXT, REMOVE 10mm HEX HEAD SCREW SECURING REAR INNER FENDER TO ROCKER AND RETAIN FOR LATER USE (SEE FIG. 2B).
3. FASTEN GROUND EFFECT TO CAR WITH TWO (2) 10mm HEX HEAD SCREWS REMOVED IN STEP 2 INTO SAME HOLES FROM WHICH THEY WERE REMOVED.
4. DRILL THROUGH REMAINING PRE-DRILLED MOUNTING HOLES USING A 1/8" DRILL BIT.
5. HOLDING THE GROUND EFFECT FIRMLY UP AGAINST THE CAR, FASTEN WITH THREE (3) 10mm HEX HEAD SCREWS PROVIDED WITH YOUR NEW ACI GROUND EFFECTS THROUGH HOLES DRILLED IN PREVIOUS STEP.
6. CHECK FOR ADEQUATE FIT OF GROUND EFFECT TO CAR. MAKE ANY ADJUSTMENTS THAT MAY BE NECESSARY TO ATTAIN ADEQUATE FIT BEFORE MOVING TO THE NEXT STEP.
7. ONCE PROPER FIT IS ACHIEVED, REMOVE GROUND EFFECT AND COMPLETE ALL NECESSARY PREP AND PAINT WORK.

!!!TIP!!!

BEFORE PREP SANDING BEGINS, WASH PARTS DOWN WITH A STRONG DETERGENT, SUCH AS DISH SOAP, TO REMOVE ANY MOLD RELEASE AGENTS PRESENT FROM THE MANUFACTURING PROCESS.

8. REPEAT STEPS 2 – 7 ON OTHER SIDE OF CAR. REINSTALL GROUND EFFECTS.


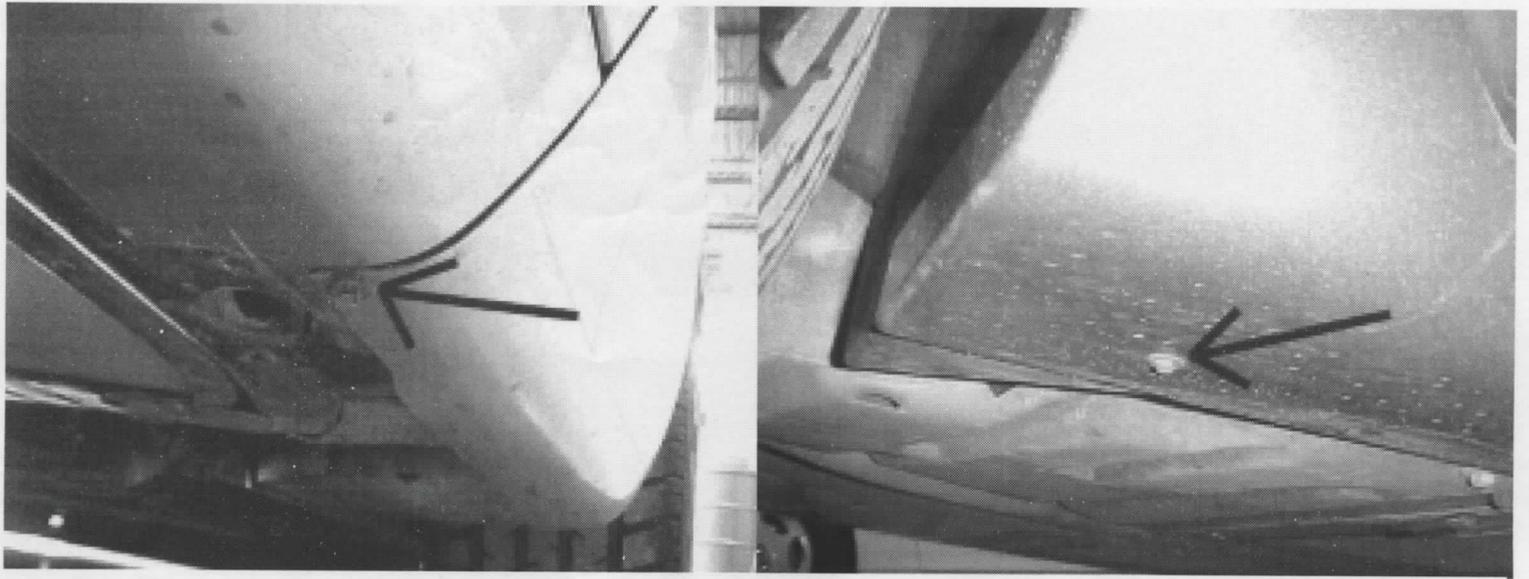


FIG. 2A

FIG. 2B

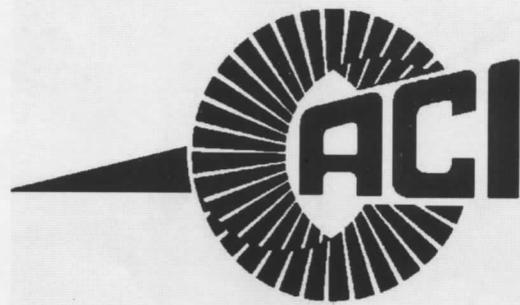

TAKE THE TOUR!
VISIT OUR WEBSITE
WWW.ACIVETTE.COM