

INSTRUCTIONS FOR INSTALLATION OF ACI PART

AGK 670

IMPORTANT NOTICE

**READ ALL INSTRUCTIONS PRIOR TO INSTALLATION!
FIBERGLASS PARTS MUST BE FITTED BEFORE ANY PREP OR PAINT
WORK!**

THE FOLLOWING INSTRUCTIONS WITH CORRESPONDING PICTURES WILL HELP WITH THE INSTALLATION OF THE PART NUMBER LISTED. IF YOU NEED TECHNICAL ASSISTANCE CALL AMERICAN CUSTOM INDUSTRIES BETWEEN 8:00 AM AND 3:00 PM. 1 800 822-8020

1. JACK CAR UP AND SECURE WITH JACK STANDS.
2. STARTING WITH THE RIGHT SIDE, REMOVE THE TWO FACTORY HEX HEAD SCREWS.(**FIG. 1**) AND (**FIG. 1A**)
3. HOLDING THE RIGHT HAND GROUND EFFECT IN PLACE. REINSTALL FACTORY SCREWS REMOVED IN STEP 2.(**FIG. 2**) AND (**FIG. 2A**)
4. USING THE PRE DRILLED HOLES IN GROUND EFFECTS AS A GUIDE DRILL THE FIVE REMAINING HOLES USING A 5/32 DRILL BIT. (**FIG. 3**)
5. USING THE HIGH/LOW SCREWS SUPPLIED IN HARDWARE KIT SECURE THE GROUND EFFECT PANEL TO THE CAR. **CAUTION: DO NOT OVER TIGHTEN SCREWS. (FIG. 4)**
6. REPEAT STEPS ONE THRU FIVE ON LEFT SIDE OF CAR.
7. YOU MAY HAVE TO SLOT THE HOLES IN GROUND EFFECTS TO ACHIEVE THE BEST FIT.
8. YOU CAN NOW REMOVE GROUND EFFECTS FOR PREP AND PAINT.



FIG 2

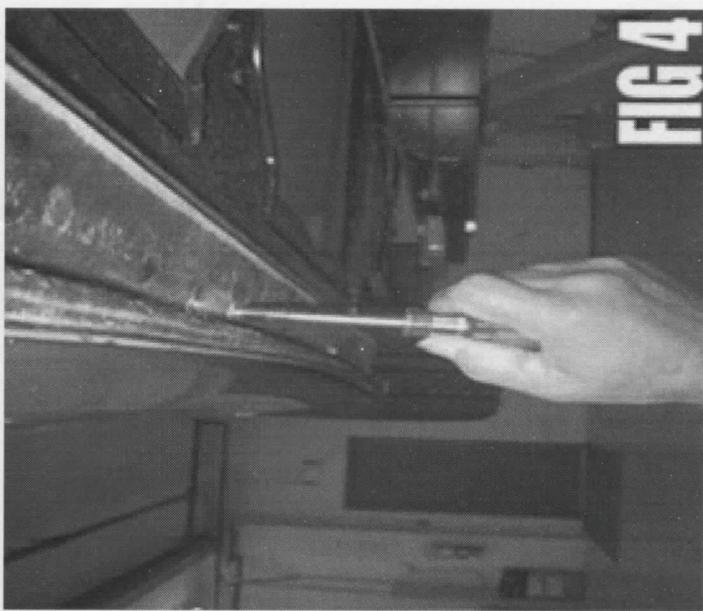


FIG 4

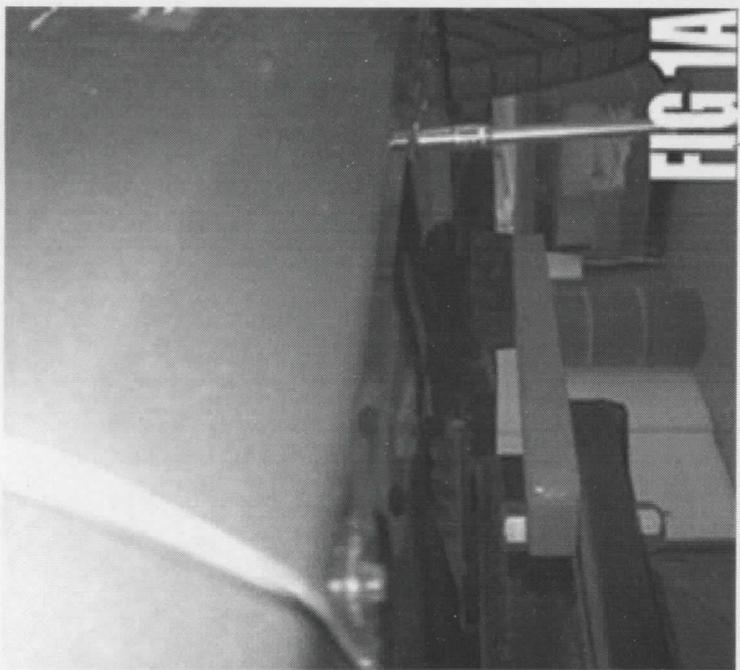


FIG 1A



FIG 3

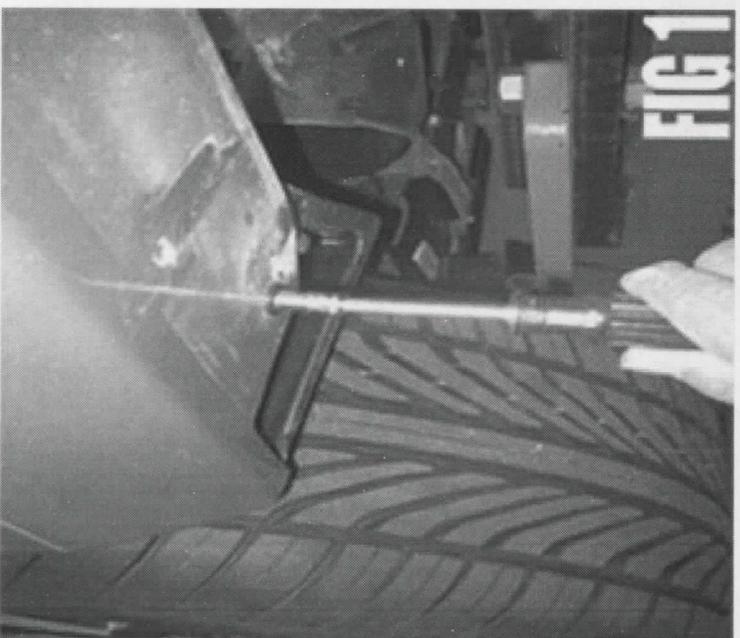


FIG 1

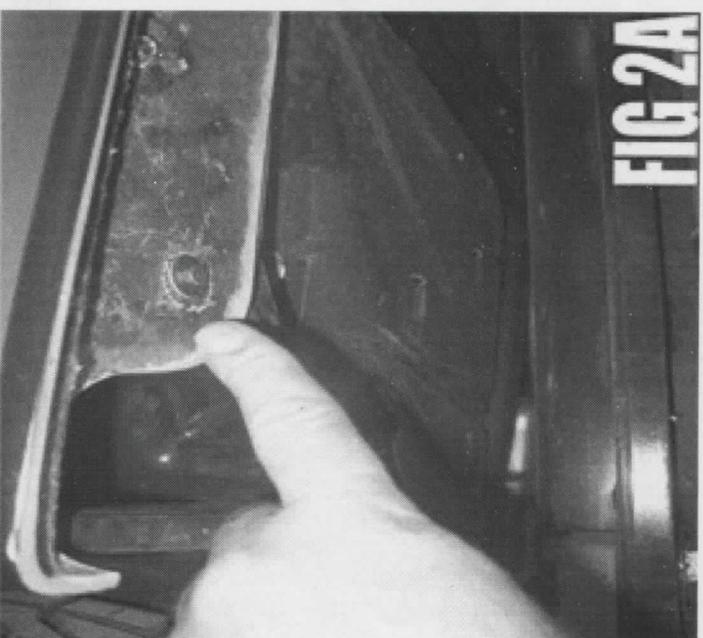


FIG 2A