

INSTRUCTIONS FOR INSTALLATION OF ACI PART
AWF 755
IMPORTANT NOTICE

**READ ALL INSTRUCTIONS PRIOR TO INSTALLATION!
FIBERGLASS PARTS MUST BE FITTED BEFORE ANY PREP OR PAINT
WORK!**

THE FOLLOWING INSTRUCTIONS WITH CORRESPONDING PICTURES WILL HELP WITH THE
INSTALLATION OF THE PART NUMBER LISTED. IF YOU NEED TECHNICAL ASSISTANCE
CALL AMERICAN CUSTOM INDUSTRIES BETWEEN 8:00 AM AND 3:00PM. **1 800 822-8020**

1. REMOVE ALL FOUR TAILLIGHT ASSEMBLIES. SET ASIDE TO BE REINSTALLED LATER.
2. REACHING THRU TAILLIGHT OPENING IN REAR BUMPER. LOCATE THE WIRING HARNESS FOR THIRD BRAKE LIGHT, AND UNPLUG HARNESS FROM LIGHT.
3. AGAIN REACHING THRU THE TAILLIGHT OPENINGS, LOCATE THE FOUR BRAKE LIGHT HOUSING MOUNTING STUDS, AND REMOVE THE FOUR RETAINING NUTS. REMOVE THE THIRD BRAKE LIGHT ASSEMBLY FROM CAR. **(FIG.1)**
4. WITH THE FACTORY BRAKE LIGHT ASSEMBLY ON THE BENCH TRANSFER THE FOUR FACTORY MOUNTING STUDS AND THE FACTORY BRAKE LIGHT TO YOUR NEW ACI BRAKE LIGHT SPOILER. **(FIG.2) AND (FIG.2A) NOTE: SOME LIGHT SANDING MAY BE NECESSARY TO ACHIEVE PROPER FIT BETWEEN BRAKE LIGHT AND SPOILER. CAUTION: DO NOT OVER TIGHTEN STUDS**
5. INSTALL NEW ACI BRAKE LIGHT SPOILER ONTO CAR AND CHECK FOR FIT. MAKE ANY NECESSARY ADJUSTMENTS TO ACHIEVE PROPER FIT.
6. YOU HAVE NOW TEST FIT YOUR ACI BRAKE LIGHT SPOILER. THE SPOILER CAN NOW BE REMOVED TO BEGIN THE PREPPING AND PAINTING PROCESS.
7. ONCE PAINTED USING THE INSTRUCTIONS AS A GUIDE REINSTALL THE SPOILER AND TAILLIGHTS.

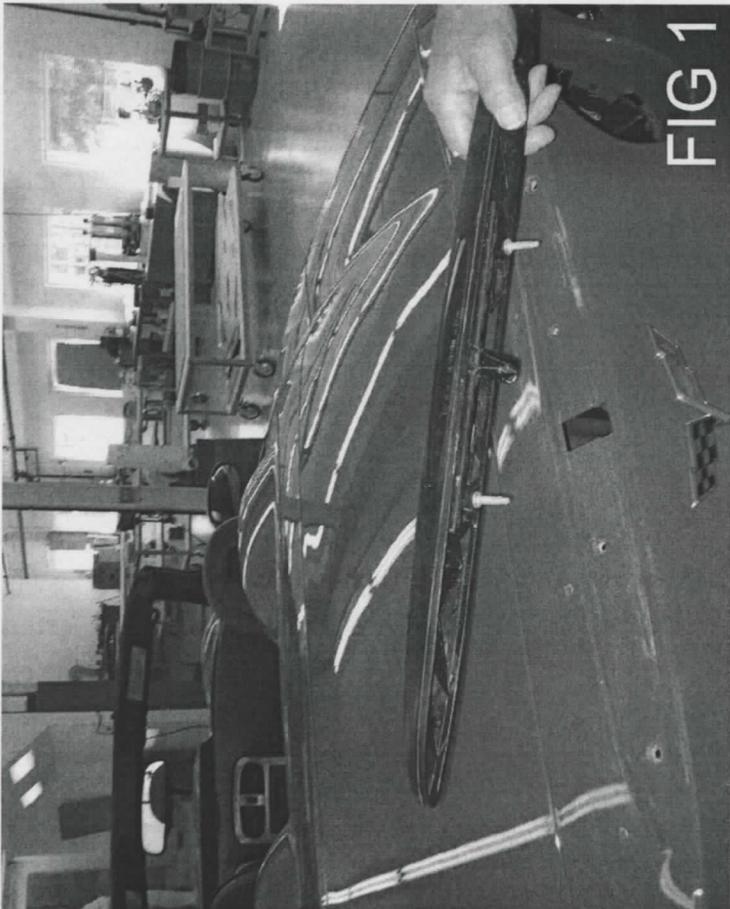


FIG 1

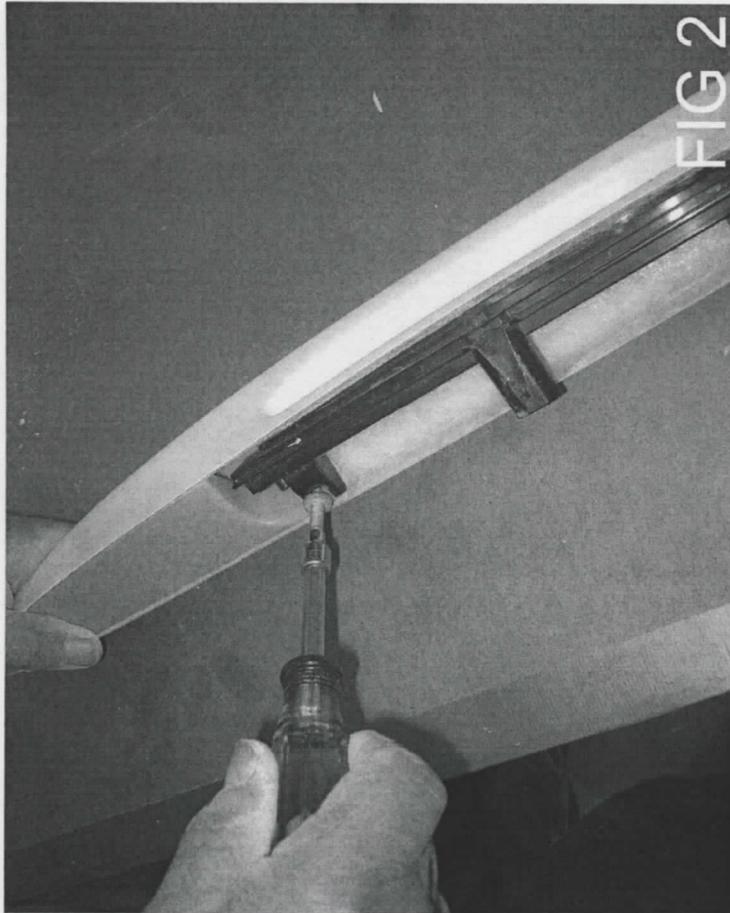


FIG 2

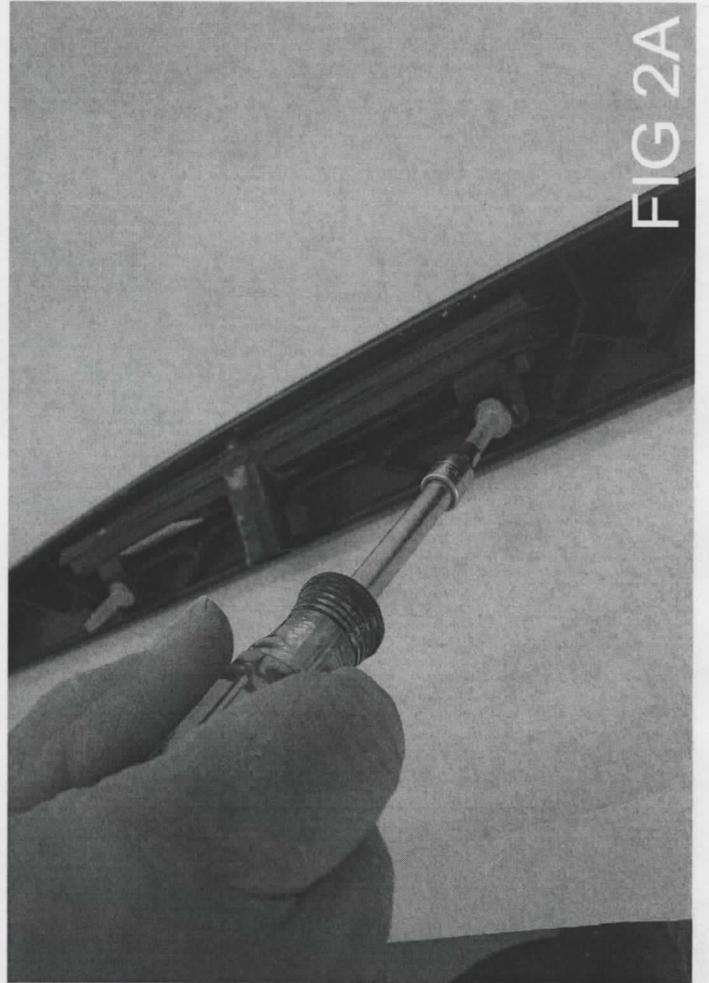


FIG 2A