

INSTALLATION INSTRUCTIONS FOR ACI  
74-79 INDY REAR SPOILERS  
CWF010, GWF010

IMPORTANT!  
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBER LISTED. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

1. APPLY AN 8" WIDE STRIP OF MASKING TAPE ACROSS REAR DECK AND DOWN QUARTER PANELS (SEE DIAGRAM A).
2. PLACE SPOILER UPSIDE DOWN ON DECK JUST ABOVE WHERE IT WILL BE MOUNTED. TRANSFER BOLT LOCATIONS TO MASKING TAPE. YOU CAN MEASURE FROM THE SEAM OF THE BUMPER TO WHERE IT BOLTS TO THE BODY FOR THE CROSS POINT OF EACH BOLT LOCATION. DOUBLE CHECK ALL MEASUREMENTS.
3. DRILL LOCATED HOLES, WHICH MAY BE ELONGATED FOR EASIER FIT.
4. PLACE SPOILER ON EDGE OF DECK FOR TEST FIT. YOU MAY SAND THE BOTTOM EDGE OF THE SPOILER TO ACHIEVE PERFECT FIT. HAND TIGHTEN ALL NUTS TO CHECK FOR PROPER FIT.
5. ONCE YOU ARE SATISFIED WITH THE FIT, YOU MAY REMOVE AND COMPLETE ANY NECESSARY PAINT WORK AND REINSTALL.

8" WIDE  
MASKING TAPE

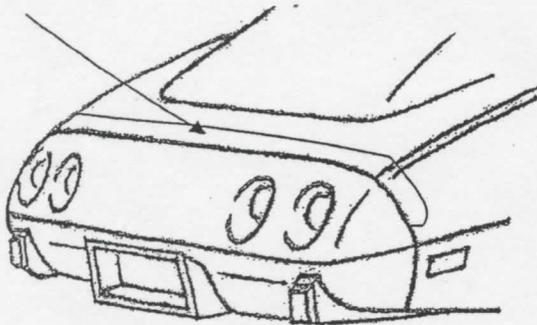


DIAGRAM A

BOLT HOLES

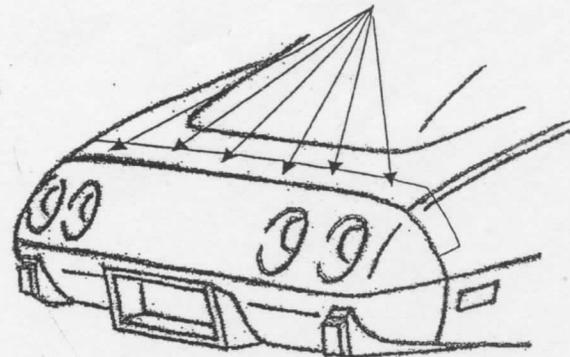


DIAGRAM B

American Custom Industries  
5035 Alexis Road  
Sylvania, OH 43560  
419-882-2091  
800-822-8020  
FAX 419-885-5161