




INSTALLATION INSTRUCTIONS FOR ACI  
70-82 SIDE GROUND EFFECTS  
KGK100

**IMPORTANT!**  
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBER LISTED. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

1. REMOVE FACTORY ROCKER MOLDING.
2. WITH DOORS OPEN, HOLD SKIRT IN PLACE AND CENTER BETWEEN FRONT AND REAR WHEEL WELLS.
3. IT MAY BE NECESSARY TO GRIND AWAY SOME OF THE REAR WHEEL WELL LIP TO ALLOW THE SKIRT TO BE CENTERED PROPERLY. **CAUTION!!! BE SURE TO MARK THE LOCATION OF THE SKIRT ON THE REAR WHEEL WELL SO YOU DON'T REMOVE ANY MATERIAL THAT THE SKIRT WILL NOT COVER.**
4. REMOVE SKIRT AND, USING A 3/16" DRILL BIT, PRE-DRILL MOUNTING HOLES IN THE FACE AND IN FRONT END OF SKIRT (REFER TO DIAGRAM).
5. PLACE SKIRT BACK IN PLACE. TRANSFER MOUNTING HOLE LOCATIONS FROM THE SKIRTS TO THE CAR FOR ALL SCREWS AND BOLTS. **NOTE...** FRONT AND REAR BOLT LOCATIONS CAN BE REACHED FROM INSIDE THE WHEEL WELL AREAS.
6. REMOVE SKIRTS AND DRILL MOUNTING HOLES ON CAR USE A 9/64" DRILL BIT FOR THE DOOR JAM AREA, 5/16" FOR THE REAR HOLE, AND 3/16" FOR THE FRONT.
7. TEST FIT BY LOOSELY INSTALLING THE DOOR JAM SCREWS AND THE FRONT AND REAR BOLTS.
8. REMOVE, PREP, AND PAINT.
9. REINSTALL, TAKING CARE NOT TO OVER-TIGHTEN THE MOUNTING HARDWARE.

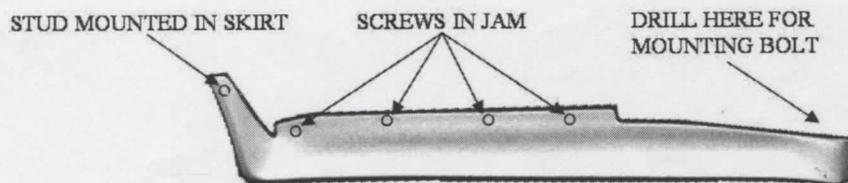

**American Custom Industries**  
5035 Alexis Road  
Sylvania, Ohio 43560  
419-882-2091  
800-822-8020  
FAX 419-885-5161