

INSTALLATION INSTRUCTIONS FOR ACI
97 - 04 HOODS
AHF700, AHF710, AHF720, AHF730

IMPORTANT!
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBER LISTED. PLEASE BE AWARE OF THE "NOTE" AND "TIP" SECTIONS. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

THE ACI HOOD YOU PURCHASED IS DESIGNED TO BE A DIRECT FACTORY REPLACEMENT. THE HOOD WILL ACCEPT ALL HARDWARE AND FASTENERS USED ON THE ORIGINAL FACTORY HOOD. HOOD INSTALLATION AND FIT SHOULD BE PERFORMED BEFORE AND PREPPING OR PAINTING BEGINS. NO PAINTED OR OTHERWISE ALTERED HOODS WILL BE ACCEPTED BY ACI FOR RETURN.

1. REMOVE FACTORY HOOD.
2. REMOVE ALL HARDWARE AND FASTENERS FROM FACTORY HOOD FOR LATER INSTALLATION. REMOVE FACTORY HOOD BLANKET.
3. TURN HOOD ALIGNMENT BUMPERS ON HOOD HINGES AND AT PILLAR POSTS DOWN TO THEIR LOWEST SETTING (SEE FIG. 3A & 3B).

!!!CAUTION!!!

IT IS VERY IMPORTANT THAT ALIGNMENT ADJUSTERS DO NOT TOUCH NEW HOOD DURING FITTING PROCESS.

!!!NOTE!!!

THE FOLLOWING SEQUENCE IN THE FITTING PROCEDURE IS IMPORTANT. ADJUSTMENTS MADE TO THE HOOD OUT OF SEQUENCE WILL CAUSE DIFFICULTIES IN FITTING THE NEW HOOD.

4. BOLT HOOD TO HINGES. INSTALL HOOD SHOCKS AND CAREFULLY LOWER HOOD INTO POSITION TO CHECK FOR PROPER FIT.

!!!CAUTION!!!

HOOD SHOCKS MUST BE INSTALLED BEFORE ANY ADJUSTMENTS ARE MADE. INSTALLING HOOD SHOCKS LATER IN THE FITTING PROCESS WILL CHANGE ALL PRIOR ADJUSTMENTS.

5. THE FIRST REFERENCE POINT TO ADJUST, IF NEEDED, IS THE RELATIONSHIP OF THE FRONT CORNERS OF THE HOOD WHERE IT MEETS THE FENDERS (SEE FIG. 5A). DUE TO THE TOLERANCES IN THE FENDER HEIGHT, THE HOOD MIGHT NEED TO BE RAISED OR LOWERED TO MATCH FENDER HEIGHT. FOR A SLIGHT ADJUSTMENT TO RAISE THE HOOD, LOOSEN THE TOP HOOD BOLT ON HINGE AND ADJUST BOLT FORWARD (SEE FIG. 5B). FOR A SLIGHT ADJUSTMENT TO LOWER THE HOOD, ADJUST BOLT TOWARD REAR OF CAR (SEE FIG. 5C). **NOTE... THESE ADJUSTMENTS AT THE TOP BOLT ON THE HOOD HINGE ARE FOR "SLIGHT" ADJUSTMENTS. ADJUSTMENTS AT THE TOP BOLT WILL ALSO CAUSE THE HOOD TO MOVE FORWARD WHEN YOU RAISE THE HOOD HEIGHT AND BACK WHEN YOU LOWER THE HOOD HEIGHT. FOR ADJUSTMENTS TO RAISE THE HOOD 3/16" OR MORE WE SUGGEST USING A BODY SHIM UNDER THE FRONT BOLT OF HOOD HINGE BETWEEN HINGE AND FRAME RAIL (SEE FIG. 5D).**
6. ADJUST REAR CORNERS OF HOOD WHERE HOOD MEETS FENDERS AT WINDSHIELD POSTS. ADJUST RUBBER BUMPERS TO STOP WITHIN 1/8" OF HOOD AT DESIRED HOOD HEIGHT. **TIP... MODELING CLAY PLACED ON RUBBER BUMPER STOP WILL HELP DETERMINE PROPER 1/8" CLEARANCE NEEDED (SEE FIG. 6).**
7. ALIGN FRONT BUMPER COVER WITH HOOD HEIGHT. THE HEIGHT OF THE BUMPER COVER IS ADJUSTABLE BY REMOVING FASTENERS ALONG TOP OF BUMPER COVER (SEE FIG. 7A). CAREFULLY PULL BACK BUMPER COVER TO GAIN ACCESS TO ADJUSTER BOLTS ON FRONT OF BUMPER COVER ADJUSTMENT BAR (SEE FIG. 7B). LOOSEN AND ADJUST BUMPER ADJUSTMENT BAR TO DESIRED HEIGHT. TIGHTEN BOLTS AND REINSTALL BUMPER COVER.
8. ADJUST HEADLIGHT COVERS TO MATCH HOOD, FENDER, AND BUMPER COVER IF NEEDED (SEE FIG. 8).
9. IF ANY FRONT-TO-BACK ADJUSTMENT IS NECESSARY, ADJUSTMENT CAN BE MADE BY LOOSENING HINGE-TO-FRAME BOLTS AND MOVING HINGE TOWARD FRONT OR REAR OF HOOD OPENING (SEE FIG. 9).
10. ONCE YOU ARE SATISFIED WITH THE FIT, RAISE THE FRONT RUBBER BUMPERS AT HOOD HINGE AT FRONT OF FENDERS. **TIP... MODELING CLAY PLACED ON RUBBER BUMPER STOP WILL HELP DETERMINE PROPER 1/8" CLEARANCE NEEDED.**

!!!WARNING!!!

FAILURE TO ADJUST RUBBER BUMPER ADJUSTMENT SCREWS AS DESCRIBED COULD CAUSE HOOD TO WARP IF PRESSURE IS APPLIED TO THE HOOD BY THE RUBBER BUMPER ADJUSTMENT SCREWS IN ORDER TO ACHIEVE DESIRED HOOD HEIGHTS. ALL RUBBER BUMPERS SHOULD HAVE 1/8" CLEARANCE BETWEEN THEMSELVES AND UNDER-HOOD SURFACE.

11. REMOVE FITTED HOOD. PREP AND PAINT. **NOTE... BE SURE TO WASH HOOD DOWN WITH A PRE-PAINT CLEANER TO REMOVE AND MOLD RELEASE AGENTS PRESENT FROM THE MANUFACTURING PROCESS.**

12. ONCE PAINT WORK IS COMPLETE, REINSTALL HOOD TO PRE-FITTED POSITION.
13. REINSTALL FACTORY HOOD BLANKET WITH ORIGINAL FACTORY FASTENERS. **NOTE... FOR HIGH-RISE HOODS (AHF720, AHF730), TWO (2) HOOD BLANKET SPACERS HAVE BEEN INCLUDED WITH YOUR NEW ACI HOOD. THESE SPACERS ARE NEEDED TO PROVIDE ADEQUATE SPACING BETWEEN THE INNER HOOD SURFACE AND THE HOOD BLANKET. INSTALL THE SPACERS IN CENTER SECTION OF HOOD.**

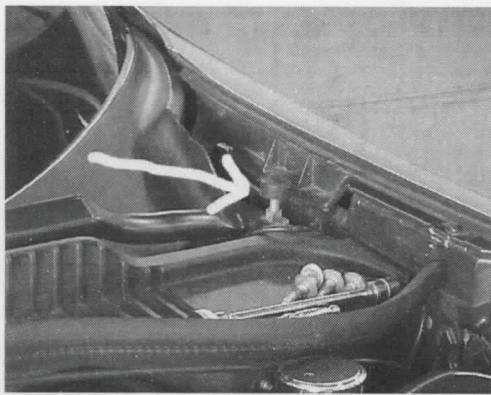


FIG. 3a



FIG. 3b

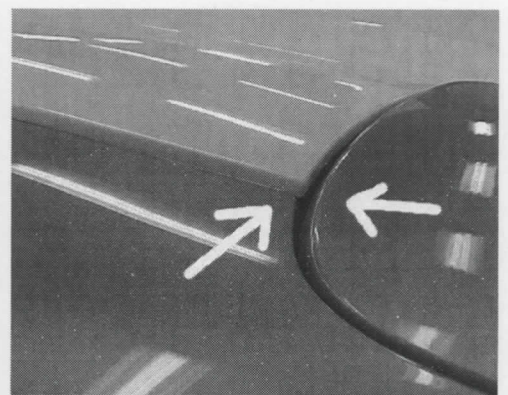


FIG. 5a



FIG. 5b



FIG. 5c

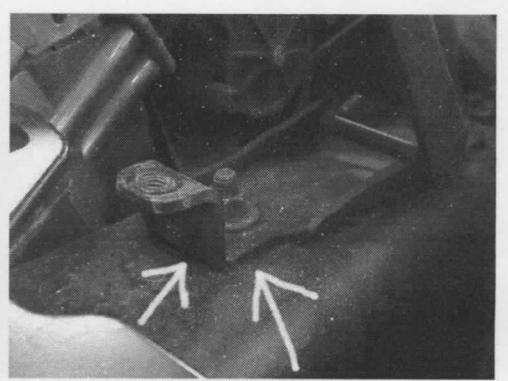


FIG. 5d



FIG. 6

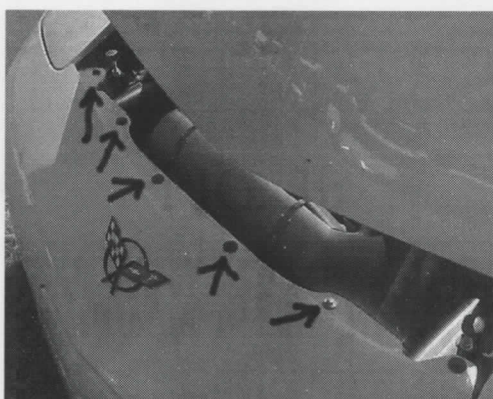


FIG. 7a



FIG. 7b

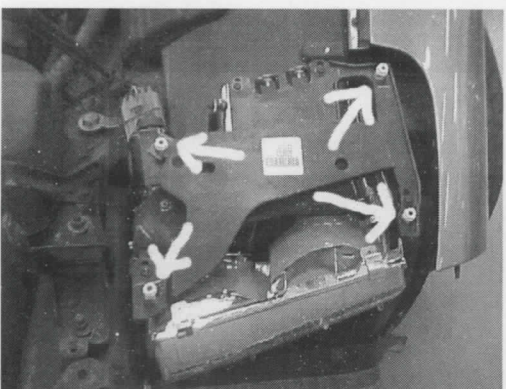


FIG. 8

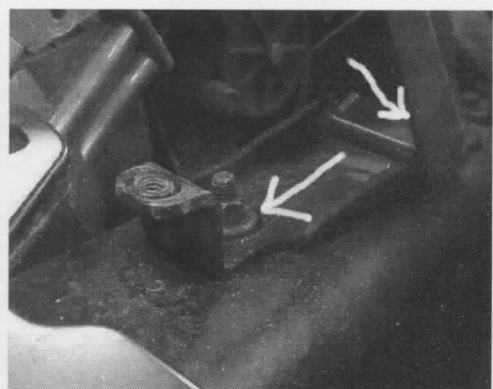


FIG. 9

