



INSTALLATION INSTRUCTIONS FOR ACI  
97 - 04 UNDER-HOOD DRESS-UP KIT  
AHF070

**IMPORTANT!**  
READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION

THE FOLLOWING INSTRUCTIONS ARE INTENDED TO FACILITATE THE INSTALLATION OF THE PART NUMBERS LISTED. YOU MAY CALL AMERICAN CUSTOM INDUSTRIES FOR TECHNICAL ADVICE, 8:00AM TO 5:00PM EASTERN, SHOULD YOU NEED ASSISTANCE AT 1-800-822-8020.

**NOTE... BEFORE ANY PAINT WORK BEGINS, TEST FIT PARTS OVER WINDSHIELD WASHER RESERVOIR AND RADIATOR EXPANSION TANK TO ENSURE ADEQUATE FIT. SOME MINOR SANDING TO UNDERSIDE OF OUTSIDE RIM OF COVERS MAY BE NECESSARY.**

1. ONCE ADEQUATE FIT IS ACHIEVED, SAND, PRIME, AND PAINT COVERS. **NOTE... BEFORE PREP SANDING BEGINS, WASH PARTS DOWN WITH A STRONG DETERGENT, SUCH AS DISH DETERGENT, TO REMOVE ANY MOLD RELEASE AGENTS PRESENT FROM THE MANUFACTURING PROCESS.**
2. ONCE ALL PAINT WORK IS COMPLETE, AND WORKING WITH THE RADIATOR EXPANSION TANK FIRST, REMOVE THE HOOD WEATHER STRIP AND TANK CAP (SEE FIG 2A & 2B).
3. REMOVE FACTORY SPRING CLAMP CONNECTING OVERFLOW HOSE TO EXPANSION TANK AND REPLACE WITH WORM-GEAR CLAMP SUPPLIED WITH NEW ACI TANK COVERS.
4. INSTALL VELCRO STRIP PROVIDED BY FIRST REMOVING TAPE FROM ADHESIVE BACK OF VELCRO WHILE KEEPING BOTH SIDES OF STRIP FASTENED TOGETHER. POSITION VELCRO STRIP ON RADIATOR EXPANSION TANK (SEE FIG. 4).
5. FIT EXPANSION TANK COVER INTO POSITION (SEE FIG. 5). APPLY SLIGHT, EVEN PRESSURE ONTO EXPANSION TANK COVER WHERE VELCRO STRIP WAS INSTALLED. SLOWLY REMOVE EXPANSION TANK COVER AND RUB VELCRO SIDE THAT IS NOW STUCK TO THE UNDERSIDE OF COVER FIRMLY INTO PLACE.
6. REINSTALL EXPANSION TANK COVER, WEATHER STRIP, AND TANK CAP (SEE FIG. 6A & 6B).
7. TO INSTALL WINDSHIELD WASHER RESERVOIR COVER, FIRST COMPLETELY REMOVE RESERVOIR CAP (SEE FIG.7).
8. INSTALL VELCRO STRIP IN SAME FASHION AS PREVIOUSLY USED IN STEPS 4 & 5 AND INSTALL WINDSHIELD WASHER RESERVOIR COVER. REINSTALL WINDSHIELD WASHER RESERVOIR CAP (SEE FIG 8A & 8B).

**American Custom Industries**  
5035 Alexis Road  
Sylvania, Ohio 43560  
419-882-2091  
800-822-8020  
FAX 419-885-5161

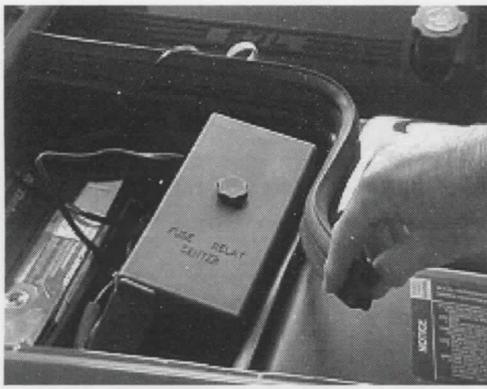


FIG. 2A

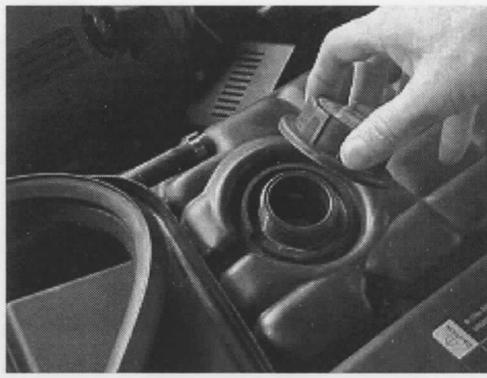


FIG. 2B

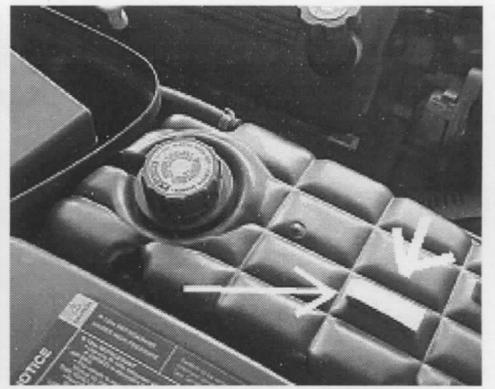


FIG. 4



FIG. 5



FIG. 6A

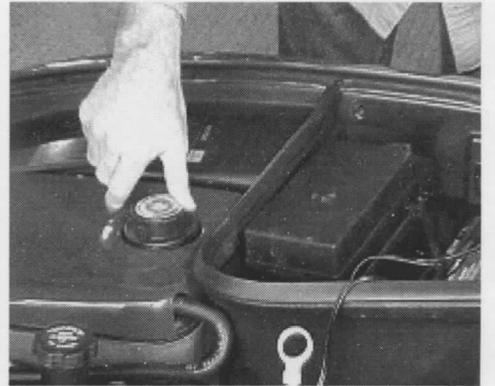


FIG. 6B

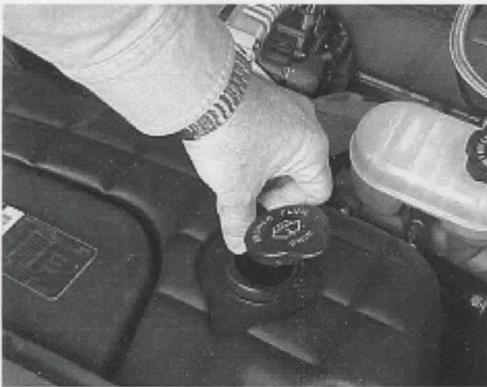


FIG. 7



FIG. 8A

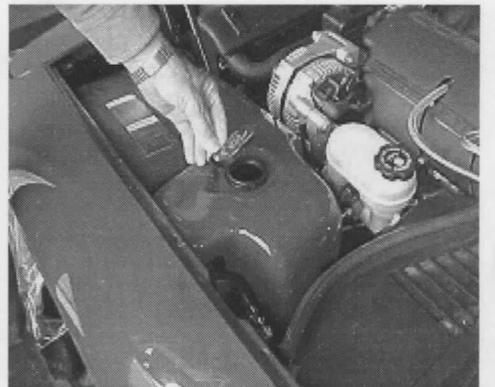


FIG. 8B

VISIT OUR WEBSITE  
[WWW.ACIVETTE.COM](http://WWW.ACIVETTE.COM)